

The Hisense logo is displayed in a bold, white, sans-serif font. The background of the entire page features a dark grey gradient on the left, transitioning into several broad, sweeping, curved bands of lighter grey and white that flow from the bottom left towards the top right.

Hisense

life reimagined

UPUTSTVO ZA UPOTREBU

Pre upotrebe ovog uređaja, molimo vas da temeljno pročitate ovo uputstvo i da ga zadržite za slučaj potrebe.

Srpski

Sadržaj

Bezbednosne informacije i upozorenja .2	Čišćenje i nega.....13
Opis uređaja8	Šta ukoliko..... 14
Upravljački panel8	Promena strane vrata15
Prva upotreba i instalacija9	Montaža ručice vrata17
Svakodnevna upotreba.....11	Odlaganje uređaja18
Korisni saveti12	



Bezbednosne informacije i upozorenja

U cilju bezbedne i pravilne upotrebe, pre instaliranja i prve upotrebe uređaja, pažljivo pročitati ovo korisničko uputstvo, uključujući savete i upozorenja. Kako bi se izbegle nepotrebne greške i nezgode, važno je osigurati da su sve osobe koje koriste uređaj dobro upoznate sa njegovom upotrebom i sigurnosnim karakteristikama.

Sačuvati ovo uputstvo i postarati se da ono prati uređaj ukoliko se uređaj premesti ili proda, kako bi se sve osobe koje će koristiti uređaj propisno informisale o njegovoj upotrebi i upoznale sa sigurnosnim napomenama.

Iz razloga zaštite zdravlja i imovine, primenjivati mere predostrožnosti iz ovog uputstva za upotrebu jer proizvođač neće biti odgovoran za štetu nastalu usled propusta.

Bezbednost dece i ostalih ugroženih kategorija ljudi

- U skladu sa EN standardom

Ovaj uređaj mogu koristiti deca starija od 8 godina i osobe sa fizičkim, čulnim ili mentalnim invaliditetom kao i neiskusne osobe i osobe koje nisu upoznate sa upotrebom ovog uređaja, ukoliko to čine pod nadzorom ili prema datim smernicama i na bezbedan način i ukoliko su svesne povezanih opasnosti. Deci nije dozvoljeno da se igraju sa uređajem. Čišćenje i korisničko održavanje uređaja ne smeju obavljati deca bez nadzora.

- U skladu sa IEC standardom

Ovaj uređaj nije predviđen za upotrebu od strane osoba (uključujući decu) sa smanjenim fizičkim, čulnim ili mentalnim sposobnostima, kao i neiskusnih osoba i osoba koje nisu upoznate sa upotrebom ovog uređaja, osim ukoliko to čine pod nadzorom ili prema smernicama za upotrebu uređaja datim od strane osobe odgovorne za njihovu bezbednost.

-
- Držati svu ambalažu van dohvata dece jer postoji rizik od gušenja.
 - Ukoliko više nećete koristiti uređaj, isključiti ga iz struje, iseći strujni kabl (što bliže uređaju) i skinuti vrata, kako bi se sprečio strujni udar ili zatvaranje dece u frižideru tokom igre.
 - Ukoliko se ovim uređajem, koji sadrži magnetne zaptivače na vratima, zameniti stariji uređaj koji sadrži ručicu sa oprugom na vratima ili poklopcu, obavezno onesposobiti ručicu sa oprugom pre odlaganja starog uređaja. To će sprečiti zaglavljivanje deteta u starom frižideru.

Opšta bezbednost

-  • **UPOZORENJE** — Ovaj uređaj je predviđen za upotrebu u domaćinstvu i sličnim primenama kao što su
 - kuhinja za radno osoblje u prodavnicama, kancelarijama i drugim radnim okruženjima;
 - farmerske kućice i za klijente u hotelima, motelima i drugim postavkama stambenog tipa;
 - objektima koji nude noćenje sa doručkom;
 - ugostiteljske i slične nemaloprodajne primene.
 - **UPOZORENJE** — Ne držati eksplozivne supstance kao što su boce sa aerosolima sa zapaljivom sadržinom u ovom uređaju.
 - **UPOZORENJE** — Ukoliko je strujni kabl oštećen, mora se zameniti od strane proizvođača, njegovog ovlašćenog servisera ili drugih kvalifikovanih lica kako bi se izbegla opasnost.
 - **UPOZORENJE** — Ukloniti sve prepreke sa otvora za ventilaciju u kućištu uređaja ili u objektu u kom se uređaj koristi.
 - **UPOZORENJE** — Ne koristiti mehaničke uređaje ili druga sredstva za ubrzavanje procesa odmrzavanja, osim onih koje preporučuje proizvođač.
 - **UPOZORENJE** — Čuvati kolo sa rashladnim sredstvom od oštećenja.
 - **UPOZORENJE** — Ne koristiti električne uređaje unutar odeljaka za skladištenje hrane u uređaju, osim ukoliko su odobreni od strane proizvođača.
-

- **UPOZORENJE** — Rashladno sredstvo i izolacioni gas su zapaljivi. Pri odlaganju uređaja, to učiniti isključivo u ovlašćenom centru za odlaganje otpada. Ne izlagati otvorenom plamenu.
- **UPOZORENJE** — Pri pozicioniranju uređaja, uveriti se da strujni kabl nije zaglavljen ili oštećen.
- **UPOZORENJE** — Ne postavljati produžne kablove ili prenosive izvore napajanja sa zadnje strane uređaja.

Zamena lampica za osvetljenje

- **UPOZORENJE** — Lampice za osvetljenje se ne smeju menjati od strane korisnika! Ukoliko dođe do oštećenja lampica za osvetljenje, kontaktirati korisničku službu za pomoć.

Ovo upozorenje važi samo za frižidere koji su opremljeni lampicama za osvetljenje.

Rashladno sredstvo

Rashladni izobutan (R600a) se nalazi u rashladnom kolu uređaja i predstavlja prirodni gas sa visokim nivoom kompatibilnosti sa prirodnom sredinom, ali je zapaljiv. Tokom transporta i instalacije uređaja, sprečiti oštećivanje bilo koje komponente kola sa rashladnim sredstvom.

Rashladno sredstvo (R600a) je zapaljivo.

- **UPOZORENJE** — Frižideri sadrže rashladno sredstvo i gasove u izolaciji. Rashladno sredstvo i gasovi se moraju odlagati na stručan način jer mogu izazvati povrede očiju ili se mogu zapaliti.

Uveriti se da cevi kola sa rashladnim sredstvom nisu oštećene pre pravilnog odlaganja.



UPOZORENJE : Rizik od požara/zapaljivih materijala

Ukoliko dođe do oštećenja kola sa rashladnim sredstvom:

- Izbegavati otvorene plamenove i izvore vatre.
- Dobro provetriti prostoriju u kojoj se nalazi uređaj.

Opasno je menjati specifikacije ili modifikovati ovaj proizvod na bilo koji način.

Bilo koje oštećenje kabla može izazvati kratak spoj, požar i/ili strujni udar.



Električna bezbednost

1. Strujni kabl se ne sme produžavati.
2. Uveriti se da utikač nije prignječen ili oštećen.
Prignječen ili oštećen utikač se može pregrejati i izazvati požar.
3. Uveriti se da je omogućen pristup glavnom utikaču uređaja.
4. Ne vući glavni strujni kabl.
5. Ukoliko je utičnica labava, ne uključivati strujni utikač.
Postoji rizik od strujnog udara ili požara.
6. Ne smete koristiti uređaj ukoliko fali poklopac unutrašnje lampice za osvetljenje.
7. Frižider se može napajati isključivo jednofaznom naizmeničnom strujom od 220~240V/50Hz. Ukoliko je fluktuacija napona u mestu korisnika toliko velika da napon prelazi gorenavedeni opseg, iz razloga bezbednosti obavezno povezati automatski regulator naizmeničnog napona, čija je snaga veća od 350W, na frižider. Frižider mora koristiti posebnu utičnicu a ne utičnicu koju deli sa drugim električnim uređajima. Žice za uzemljenje na utikaču frižidera i na utičnici se moraju poklapati.

Svakodnevna upotreba

- Ne držati zapaljive gasove ili tečnosti u uređaju. Postoji rizik od eksplozije.
- Ne koristiti bilo koje električne uređaje u uređaju (npr. električne aparate za sladoled, miksera, itd.).
- Prilikom isključivanja iz struje uvek najpre izvući utikač iz utičnice a ne vući za kabl.
- Ne postavljati vruće predmete blizu plastičnih komponenti ovog uređaja.

-
- Ne postavljati prehrambene proizvode direktno uz odvod za vazduh na zadnjoj strani.
 - Prethodno upakovane zamrznute namirnice držati u skladu sa smernicama proizvođača za zamrznutu hranu.
 - Preporuke za skladištenje koje je definisano proizvođač uređaja se moraju strogo poštovati. Videti relevantne smernice za skladištenje.
 - Ne stavljati gazirana pića ili sokove u odeljak za zamrzavanje jer se stvara pritisak u boci, koji može izazvati njeno pucanje i oštećenje uređaja.
 - Zamrznuta hrana može izazvati promrzline ukoliko se konzumira direktno iz odeljka za zamrzavanje.
 - Ne izlagati uređaj direktnoj sunčevoj svetlosti.
 - Držati sveće, lampe i ostale predmete sa otvorenim plamenom dalje od uređaja kako se uređaj ne bi zapalio.
 - Uređaj je predviđen za držanje namirnica i/ili pića u normalnom domaćinstvu kao što je opisano u ovom uputstvu. Uređaj je težak. Potrebno je biti oprezan pri premeštanju uređaja.
 - Ne uklanjati niti dodirivati predmete iz odeljka za zamrzavanje ukoliko su vam ruke vlažne/mokre, jer to može izazvati nagrizanje kože ili promrzline.
 - Nikada ne koristiti osnovu, fijeke, vrata, itd., za stajanje na njima ili kao oslonac.
 - Zamrznuta hrana se ne sme ponovo zamrzavati nakon otapanja.
 - Ne konzumirati ledene lizalice ili kockice leda direktno iz zamrzivača jer mogu izazvati promrzline u ustima i na usnama.
 - Kako bi se izbeglo ispadanje predme i izazivanje fizičke povrede ili oštećenja uređaja, ne preopterećivati police na vratima niti stavljati previše hrane u fijeke za održavanje svežine.

Oprez!

Nega i čišćenje

- Pre održavanja, isključiti uređaj i izvaditi glavni utikač iz utičnice.
- Ne čistiti uređaj metalnim predmetima, paročistačima, eteričnim uljima, organskim razređivačima ili abrazivnim sredstvima za čišćenje.
- Ne koristiti oštre predmete za uklanjanje leda sa uređaja. Koristiti plastični strugač.

Važno za instalaciju!

- U vezi sa električnim povezivanjem pažljivo pratiti smernice iz ovog uputstva.
Otpakovati uređaj i proveriti da na njemu nema oštećenja.
- Ne povezivati uređaj ukoliko je oštećen. Sve moguće štete odmah prijaviti tamo gde ste kupili uređaj. U ovom slučaju zadržati ambalažu.
- Savetuje se da se sačeka najmanje četiri sata pre povezivanje uređaja kako bi se omogućilo vraćanje ulja u kompresor.
- Potrebno je obezbediti adekvatnu cirkulaciju vazduha oko uređaja, jer u suprotnom može doći do pregrevanja. Kako bi se postigla dovoljna ventilacija, pratiti smernice vezane za instalaciju.
- Gde je to moguće zadnja strana proizvoda ne bi trebalo da bude preblizu zida kako bi se izbeglo dodirivanje ili hvatanje za vruće delove (kompresor, kondenzator) kako bi se sprečio rizik od požara; poštovati smernice vezane za instalaciju.
- Uređaj se ne sme postavljati blizu radijatora ili šporeta.
- Uveriti se da je strujni utikač pristupačan nakon instaliranja uređaja.

Servis


- Sve električne radove koji su potrebni za servisiranje uređaja bi trebalo da obavi kvalifikovani električan ili stručno lice.
- Ovaj proizvod se mora servisirati od strane ovlašćenog servisa i moraju se koristiti isključivo originalni rezervni delovi.
 - 1) Ukoliko je uređaj Frost Free (sprečava formiranje leda).
 - 2) Ukoliko uređaj sadrži odeljak za zamrzavanje

Napomena: Deca uzrasta od 3 do 8 godina mogu stavljati i uzimati hranu i druge proizvode iz rashladnih uređaja (ova klauzula se odnosi isključivo na prostor EU).

Opis uređaja

Izgled uređaja

1. Komora zamrzivača
2. Polica za led (u komori zamrzivača)
3. Polica za jaja
4. Polica za čuvanje hrane.
5. Poklopac fijke za održavanje svežine
6. Fijoka za održavanje svežine
7. Donja polica za vrata
8. Podesive nožice
9. Sijalica i regulator temperature
10. Gornja polica za vrata
11. Vrata
12. Ručica vrata (kod nekih modela)

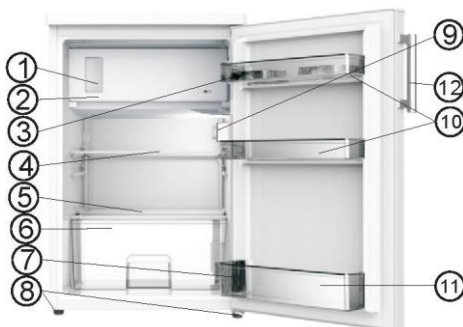

Napomena: Usled neprekidnog razvoja naših proizvoda, izgled vašeg frižidera se može donekle razlikovati od primera iz ovog uputstva, ali njegove funkcije i metode upotrebe ostaju isti.

Napomena: Kako bi se postigla najbolja energetska efikasnost ovog proizvoda, molimo vas da sve police i fijke postavite u njihov predviđen položaj kao što je prikazano na ilustraciji iznad.

Upravljački panel

Uključivanje i regulacija temperature

Povezati utikač na kraju strujnog kabela u utičnicu sa zaštitnim uzemljenjem. Kada se vrata komore frižidera otvore, unutrašnje svetlo se uključuje.

Dugme za odabir temperature se nalazi na levoj strani u komori frižidera.

Postavka "0" znači

Isključeno.

Okretanjem u smeru kazaljke na satu rashladna jedinica se uključuje, a zatim će nastaviti da radi automatski.

Postavka "1" znači

Najviša temperatura, najtoplija postavka.

Postavka "7" (krajnja tačka) znači

Najniža temperatura, najhladnija postavka.

Važno! Za optimalno čuvanje hrane, savetujemo da izaberete postavku 3 ili 4; ukoliko želite višu ili nižu temperaturu okrenite dugme na topliju ili hladniju postavku. Kada okrenete dugme na hladniju postavku, to može dovesti do veće energetske efikasnosti.

U suprotnom, rezultovaće većom potrošnjom energije.

Važno! Visoke temperature u okruženju (npr.

tokom toplih letnjih dana) i hladna postavka na regulatoru temperature (položaj 6 do 7) mogu izazvati dugotrajn ili čak neprekidan rad kompresora!

Razlog: kada je temperatura sredine visoka, kompresor mora raditi neprekidno kako bi se održala niska temperatura u uređaju.

NAPOMENA: Visoke postavke temperature će ubrzati propadanje hrane.

Zamena sijalice

Upozorenje!




• Pre zamene sijalice, isključiti uređaj i izvaditi utikač iz utičnice, ili isključiti osigurač ili sklopku.

• Ukoliko sijalica ne radi, molimo vas da kontaktirate vašeg distributera ili lokalnu korisničku službu kako bi zamenili sijalicu.

Sijalica (unutra)

Dugme termostata

Poklopac sijalice

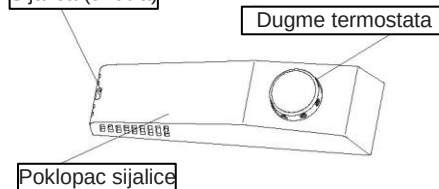

Prva upotreba i instalacija

Čišćenje pre upotrebe

- Pre prve upotrebe uređaja isprati unutrašnjost uređaja i sve unutrašnje pomoćne elemente mlakom vodom i neutralnim sapunom kako bi se otklonio miris potpuno novog proizvoda, zatim dobro osušiti.

Pozicioniranje uređaja




Upozorenje! Pre instaliranja, pažljivo pročitati uputstvo za upotrebu kako biste osigurali vašu bezbednost i

pravilan rad uređaja.

- Postaviti uređaj dalje od izvora toplote kao što su šporeti, radijatori, direktne sunčeva svetlost, itd.
- Maksimalne performanse i bezbednost su garantovani održavanje odgovarajuće unutrašnje temperature za datu klasu uređaja, kao što je navedeno na nazivnoj pločici.
- Ovaj uređaj dobro radi u klasama N do ST. Uređaj možda neće raditi pravilno ukoliko temperatura u njemu duže vreme bude iznad ili ispod definisanog opsega.

Klimatska klasa	Temperatura sredine
SN	+10°C do +32°C
N	+16°C do +32°C
ST	+16°C do +38°C
T	+16°C do +43°C

Važno! Neophodno je omogućiti dobru ventilaciju oko frižidera kako bi se omogućilo odvođenje toplote, velika efikasnost i niska potrošnja struje. Iz tog razloga je potrebno omogućiti dovoljno slobodnog prostora oko frižidera. Savetuje se ostavljanje prostora od 50-70mm od zadnje strane frižidera do zida, najmanje 100mm sa bočnih strana, slobodan prostor od najmanje 100mm sa gornje strane i

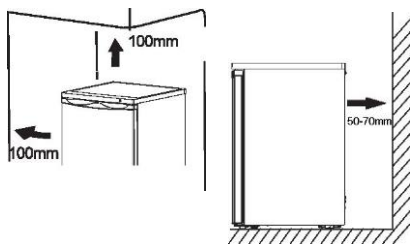


slobodan prostor ispred uređaja kako bi se omogućilo otvaranje vrata do 160°.

- Uređaji se ne smeju izlagati kiši. Mora se obezbediti dovoljna cirkulacija vazduha u donjem zadnjem delu uređaja, jer loša cirkulacija vazduha može uticati na performanse uređaja. Ugradni uređaji bi trebalo da se postavljaju dalje od izvora toplote kao što su grejna tela i direktna sunčeva svetlost.

Ugradnja gumenog oslonca


- Ukoliko je uz vaš uređaj došla plastična kesica sa gumenim osloncem i vijkom, možete ugraditi ove pomoćne elemente prateći sledeću proceduru.
Napomena:
Nema potrebe za ugradnjom ovih pomoćnih elemenata u normalnim uslovima upotrebe.
U ekstremnim slučajevima, kada je frižider prazan na vrata deluje opterećenje od 15 kg a vrata se otvaraju oko 90 stepeni, može doći do prevrtanja frižidera. Tada je potrebno postaviti gumeni oslonac na donji poklopac kako bi se obezbedila ravnoteža uređaja.

- Nagnuti uređaj kako biste pronašli rupu za vijak na levoj strani donjeg poklopca.

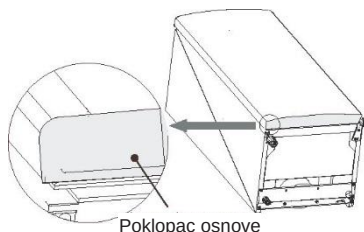


Prva upotreba i instalacija

2. Postaviti vijak u otvor na gumenom osloncu.

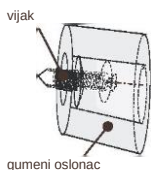

3. Ušrafiti vijak poravnato sa rupom na donjem poklopcu. Pričvrstiti gumeni oslonac na donji poklopac pomoću krstastog odvijača (mora ga obezbediti korisnik).

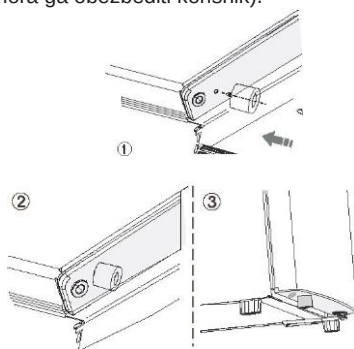

Nivelisanje

- Uređaj bi trebalo da bude nivelisan kako bi se eliminisale vibracije. Kako bi se uređaj nivelisao, postaviti ga uspravno a obe nožice za podešavanje bi trebalo da su čvrsto oslonjene na pod. Takođe možete podesiti nivelisanost odvijanjem odgovarajuće nožice za podešavanje na prednjoj strani (rukom ili odgovarajućim ključem).

Električni priključak

Oprez! Sve električne radove prilikom instaliranja uređaja bi trebalo da obavi kvalifikovani električar ili ovlašćeno stručno lice.

Upozorenje! Ovaj uređaj mora biti uzemljen. Proizvođač odbacuje svu odgovornost ukoliko se ove mere ne poštuju.

- Ovaj rashladni uređaj nije predviđen za upotrebu kao ugradni uređaj.

Svakodnevna upotreba


Prateća oprema ¹⁾

Prenosive police/fijoke

- Vaš aparat sadrži različite staklene, plastične police ili fijoke za čuvanje hrane – različiti modeli imaju različite kombinacije i različite karakteristike.
- Zidovi frižidera su opremljeni nizom klizača tako da se police mogu postaviti prema preferencijama korisnika.

Uklanjanje police za vrata


Držati levu stranu police za vrata, pritisnuti drugu stranu ka unutra i podići ovu stranu sve dok se ne odvoji od vođice. Nakon toga je moguće izvaditi policu za vrata iz vođice.

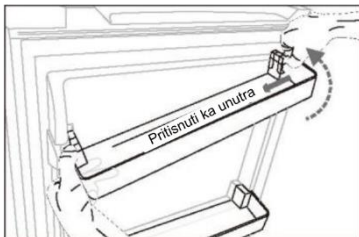

Ugradnja police za vrata

Najpre, postaviti levu stranu police za vrata.

Zatim, pritisnuti drugu stranu ka unutra i pritisnuti tu stranu nadole sve dok u potpunosti ne legne u predviđeni položaj.

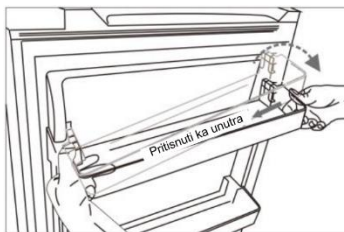

Fijoka za održavanje svežine

- Za čuvanje voća i povrća.

Polica za led

- Za pravljenje leda i čuvanje kockica leda.

Komora frižidera ²⁾

- Za čuvanje hrane koju nije potrebno zamrzavati u različitim odeljcima koji su podesni za različite vrste hrane.

Odeljak za zamrzavanje hrane ²⁾

- Za zamrzavanje sveže hrane i čuvanje zamrznutih i duboko zamrznutih namirnica duže vreme.

Otapanje namirnica ²⁾

- U komori frižidera.
Na sobnoj temperaturi.
U mikrotalasnoj pećnici.
U konvencionalnoj ili konvekcijskoj rerni.
Namirnice koje su jednom otopljene ne bi trebalo da se ponovo zamrzavaju izuzev u posebnim slučajevima.

1) Ukoliko uređaj sadrži pripadajuću prateću opremu i funkcije.

2) Ukoliko uređaj sadrži odeljak za zamrzavanje.

Korisni saveti

Buka tokom rada uređaja

Klikovi - Kada god se kompresor uključi ili isključi, čuje se klik.

Brujanje - Čim se kompresor uključi, može se čuti brujanje.

Žuborenje - Kada rashladna tečnost ulazi u tanke cevi, može se čuti žuborenje ili prskanje.

Prskanje - Čak i kada se kompresor isključi, ovaj šum se može nakratko čuti.

Saveti za uštedu energije

- Ne instalirati uređaj u blizini šporeta, radijatora ili drugih izvora toplote.
- Vreme otvorenosti uređaja svesti na minimum.
- Ne podešavati nižu temperaturu nego što je to potrebno.
- Uveriti se da su bočni paneli i zadnji panel uređaja na određenoj udaljenosti od zida i poštovati smernice vezane za instalaciju.
- Ukoliko dijagram pokaže tačnu kombinaciju za fijke, odeljak za održavanje svežine i police, ne menjati takvu kombinaciju jer bi uticala na potrošnju energije.

Saveti za čuvanje sveže hrane

- Ne stavljati toplu hranu ili tečnosti koje isparavaju u uređaj.
- Pokriti ili obmotati hranu, naročito ukoliko ima jak ukus ili miris.
- Rasporediti namirnice tako da se omogući cirkulacija vazduha oko njih.

Saveti za hlađenje

- Meso (sve vrste): umotati u polietilenske (plastične) kesice i staviti na staklenu policu iznad samo jedan ili najviše dva dana.
- Kuvana hrana, hladna jeda, itd.: potrebno je pokriti ih i mogu se staviti na bilo koju policu.
- Voće i povrće: potrebno je dobro ih očistiti i postaviti u specijalnu fijoku.

- Maslac i sir: Trebalo bi ih staviti u aluminijumsku foliju ili polietilenske (plastične) kesice uz maksimalno istiskivanje vazduha.
- Flaše za mleko: moraju imati poklopac i trebalo bi ih postaviti u policu za flaše u vratima.

Saveti za zamrzavanje

- Prilikom prvo uključivanja nakon dužeg perioda nekorišćenja. Pre stavljanja namirnica u odeljke, ostaviti uređaj da radi najmanje 2 sata na višim postavkama.
- Namirnice podeliti u male porcije kako bi se omogućilo njihovo brzo i potpuno zamrzavanje i kasnije omogućilo otapanje samo one količine koja je potrebna.
- Umotati hranu u aluminijumsku ili polietilensku (plastičnu) foliju i uveriti se da su pakovanja potpuno zaptivena.
- Sprečiti da sveža, nezamrznuta hrana dodirne zamrznutu hranu, kako bi se izbegao rast temperature zamrznute hrane.
- Zaleđeni proizvodi, ukoliko se konzumiraju odmah nakon uklanjanja iz odeljka za zamrzavanje, mogu uzrokovati promrzline na koži.
- Preporučuje se da se na svakom zamrznutom pakovanju napiše naziv i datum zamrzavanja kako bi se pratilo vreme držanja.

Saveti za čuvanje zamrznutih namirnica

- Uveriti se da su fabrički zamrznute namirnice bile propisno držane od strane maloprodavca.
 - Kada se odlede, namirnice brzo propadaju i ne mogu se ponovo zaleđiti.
 - Ne prekoračivati period čuvanja koji je naznačen od strane proizvođača.
- Napomena:** Ukoliko uređaj sadrži pripadajuću prateću opremu i funkcije.

Čišćenje i nega

Čišćenje i nega

Iz higijenskih razloga, unutrašnjost uređaja, uključujući unutrašnje elemente, bi trebalo da se redovno čisti.

Uređaj bi trebalo da se čisti i održava najmanje na svaka dva meseca.



Upozorenje! Opasnost od strujnog udara!

Uređaj ne bi trebalo da bude uključen u struju tokom čišćenja. Pre čišćenja, isključiti uređaj i izvaditi utikač iz utičnice, ili isključiti sklopku ili osigurač.

Napomena!

- Ukloniti namirnice iz uređaja pre čišćenja. Postaviti ih na hladno mesto i dobro ih pokriti.
- Nikada ne čistiti uređaj paročistačem. Može doći do akumuliranja vlage u električnim komponentama.
- Vrela isparenja mogu oštetiti plastične delove.
- Eterična ulja i organski razređivači mogu oštetiti plastične delove, npr. sok od limuna ili sok iz kore narandže, buterna kiselina ili sredstva za čišćenje koja sadrže sirćetnu kiselinu.
- Ne koristiti abrazivna sredstva za čišćenje.
- Uređaj i unutrašnje elemente čistiti krpom i mlakom vodom. Takođe se mogu koristiti komercijalno dostupni deterdženti za pranje sudova.
- Nakon čišćenja, obrisati svežom vodom i čistom krpom za sudove.
- Taloženje prašine na kondenzatoru povećava potrošnju struje; očistiti kondenzator sa zadnje strane uređaja jednom godišnje mekom četkom ili usisivačem (samo kod proizvoda sa spoljašnjim kondenzatorom).
- Proveriti otvor za pražnjenje vode na zadnjoj strani komore frižidera.
- Očistiti zapušten otvor za pražnjenje pomoću nekog mekog štapića i voditi računa da se komora ne ošteti ostrim predmetima.
- Nakon što se sve potpuno osuši, ponovo uključiti uređaj.

Otapanje frižidera

Otapanje u odeljku za čuvanje sveže hrane

- Voda koja se stvara otapanjem će se automatski sakupiti u posudi za kapanje preko drenažne cevi na zadnjoj strani

frižidera.

Otapanje u odeljku za čuvanje zamrznute hrane

- Otapanje u komori za zamrzavanje se kontroliše manuelno. Pre otapanja izvaditi namirnice.
- Izvaditi policu za led i fijoce ili ih privremeno smestiti u odeljak za svežu hranu.
- Podesiti dugme regulatora temperature u položaj "0" (kompresor će se isključiti) i ostaviti vrata frižidera otvorenim sve dok se led i inje u potpunosti ne otope i dok se voda ne akumulira na dnu komore zamrzivača. Prikupiti vodu mekom krpom.
- Kako bi se ubrzao proces otapanja, možete postaviti posudu sa toplom vodom (oko 50°C) u komoru za zamrzavanje i sastrugati led pomoću strugača za otapanje. Nakon toga, obavezno vratiti dugme regulatora temperature u početni položaj.
- Ne savetuje se direktno zagrevanje komore za zamrzavanje toplotom vodom ili fenom za sušenje kose prilikom otapanja kako bi se izbeglo deformisanje unutrašnjeg kućišta.
- Ne savetuje se struganje leda ili razdvajanje namirnica od ambalaže koja je slepljena sa namirnicama pomoću ostrih alata ili drvenih štapova, kako se ne bi oštetilo unutrašnje kućište ili površina evaporatora.

Upozorenje! Za isključivanje uređaja pre otapanja, okrenuti regulator temperature u položaj "0".

Napomena! Uređaj bi trebalo da se odledi najmanje jednom mesečno. Ukoliko se vrata uređaja često otvaraju tokom njegove upotrebe ili se uređaj koristi u veoma vlažnim uslovima, savetujemo korisniku da postupak otapanja frižidera obavlja svake dve nedelje.

Stavljanje uređaja van upotrebe

- Isprazniti uređaj
- Isključiti ga iz struje
- Temeljno ga očistiti (videti odeljak: Čišćenje i nega).
- Ostaviti vrata otvorenim kako bi se sprečili neprijatni mirisi.

Šta ukoliko...



Upozorenje! Pre otklanjanja problema, prekinuti napajanje. Isključivo kvalifikovani električar ili drugo radno osoblje moraju obaviti otklanjanje problema koji nisu opisani u uputstvu.

Važno!

Popravke na uređaju mogu obavljati

isključivo stručni serviseri.

Nepropisne popravke mogu izazvati velike opasnosti na strani korisnika. Ukoliko je neophodna popravka vašeg uređaja, molimo kontaktirajte našeg specijalizovanog distributera ili lokalnu Korisničku službu.

Problem	Mogući uzrok	Rešenje
Uređaj ne radi.	Uređaj nije uključen.	Uključiti uređaj.
	Glavni utikač nije uključen u struju ili je labavo postavljen.	Povezati uređaj u električnu utičnicu.
	Osigurač je probijen ili je neispravan.	Proveriti osigurač, zameniti ga ukoliko je potrebno.
	Utičnica je neispravna.	Neispravne delove mora popraviti električar.
Uređaj se previše hladi.	Podešena temperatura je preniska.	Privremeno okrenuti regulator temperature na topliju postavku.
Hrana je pretopla.	Temperatura nije pravilno podešena.	Molimo videti odeljak "Uključivanje i regulacija temperature".
	Vrata su bila otvorena duže vreme.	Vrata otvoriti samo onoliko koliko je potrebno.
	Velika količina tople hrane je stavljena u uređaj u poslednja 24 časa.	Privremeno okrenuti regulator temperature na topliju postavku.
	Uređaj se nalazi blizu izvora toplote.	Molimo vas da pogledate odeljak "Lokacija za instaliranje".
Unutrašnje osvetljenje ne radi.	Sijalica je neispravna.	Molimo vas da pogledate odeljak "Zamena sijalice".
Velike naslage leda, verovatno i na dihtungu vrata.	Dihtung vrata ne zaptiva dobro (moguće nakon promene strane vrata).	Pažljivo zagreјati delove dihtunga vrata koji propuštaju vazduh pomoću fena za kosu (hladnijim vazduhom). Istovremeno oblikovati zagreјani dihtung vrata rukom tako da dobro nalegne.
Neuobičajeni zvuci.	Uređaj nije nivelisan.	Podesiti nožice.
	Uređaj dodiruje zid ili druge predmete.	Blago pomeriti uređaj.
	Komponenta, npr. cev, sa zadnje strane uređaja dodiruje drugi deo uređaja ili zid.	Ukoliko je potrebno, pažljivo saviti komponentu tako da ne dodiruje ništa.
Kompresor se ne uključuje odmah nakon izmene temperaturnih postavki.	Ovo je normalno, nema greške.	Kompresor će se uključiti nakon nekog vremena.
Voda na podu ili policama za stavljanje namirnica.	Otvor za pražnjenje vode je zapušen.	Videti odeljak "Čišćenje i nega".

Promena strane vrata

Strana na koju se vrata otvaraju se može promeniti, sa desne strane (u isporučenom stanju) na levu stranu, ukoliko to mesto ugradnje zahteva. Alati koji su vam potrebni:

1. Odvijač sa nasadnom glavom od 8mm.



2. Odvijač sa nasadnom glavom od 10mm.



3. Odvijač sa krstastim vrhom




4. Špahtla ili odvijač sa ravnim vrhom.




Pre nego što oborite frižider na zadnju stranu kako biste imali bolji pristup osnovi, trebalo bi da ga naslonite na materijal od meke pene ili sličan materijal kako bi se izbeglo oštećivanje rashladnih cevi sa zadnje strane frižidera.

Promena strane vrata

1. Uspraviti frižider, ukloniti dva vijka sa zadnje strane gornjeg poklopca, zatim podići gornji poklopac i postaviti ga na obloženu površinu kako bi se sprečilo grebanje.

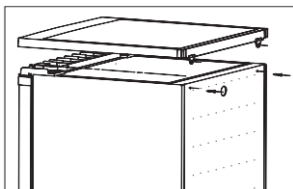


2. Ukloniti četiri vijka kao na dijagramu. Podići osovnicu gornje šarke, zatim je pričvrstiti u odgovarajući položaj.

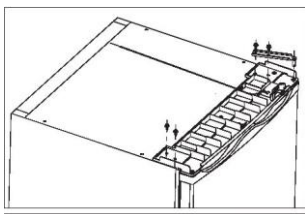


3. Podići vrata i postaviti ih na obloženu površinu kako bi se sprečilo grebanje. Ukloniti obe podesive nožice i ukloniti donju šarku, odvijanjem vijaka. Zatim ih preneti na drugu stranu.


Napomena: 1. Morate premestiti osovnicu šarke iz rupe ① u ② pre prebacivanja vrata.
2. Morate postaviti gumeni oslonac sa one strane na kojoj nema šarki.

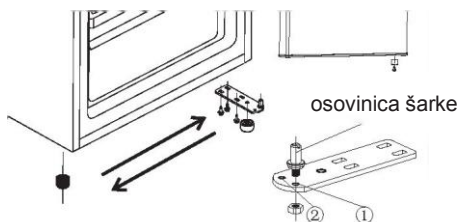

4. Postaviti vrata u novi položaj vodeći računa da osovine ulaze u čauru na donjem delu konstrukcije. Zameniti stranu vrata postavljanjem osovine gornje šarke u otvor na gornjim vratima, uz pričvršćivanje sa 2 vijka. Zameniti još 2 vijka sa druge strane.

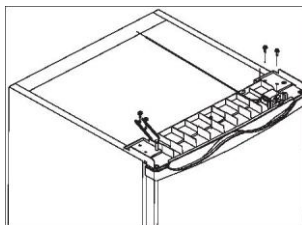


5. Postaviti gornji poklopac u zamrzivaču. Zategnuti 2 vijka na zadnjoj strani gornjeg poklopca.

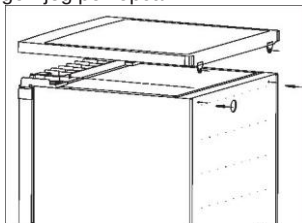


Promena strane vrata komore zamrzivača



1. Držati vrata komore zamrzivača zatvorenim. Pomoću odvijača, ukloniti vijak za montažu dugmeta za instalaciju i skinuti dugme za instalaciju.

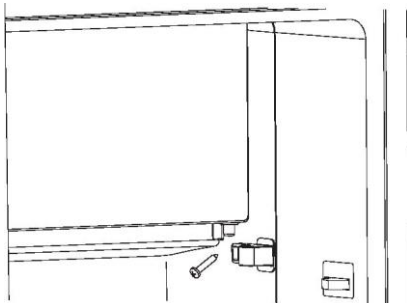


2. Malo otvoriti vrata komore zamrzivača. Skinuti vrata komore zamrzivača i poklopac koji pokriva nosač vrata (1).

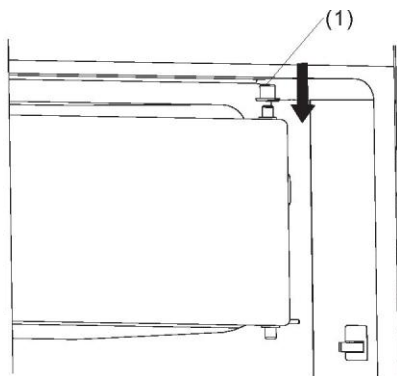


3. Pomoću odvijača, skinuti kopču za ugradnju pa je zatim postaviti na suprotnu stranu.

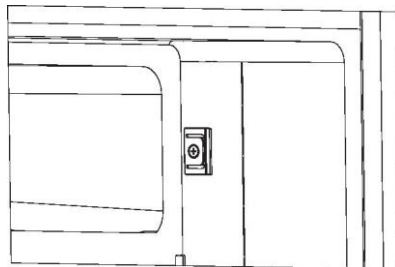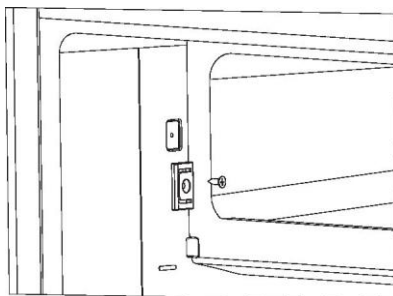

4. Okrenuti vrata komore zamrzivača za 180°, postaviti poklopac na nosaču vrata, zatim postaviti vrata u otvor za osovinu vrata.

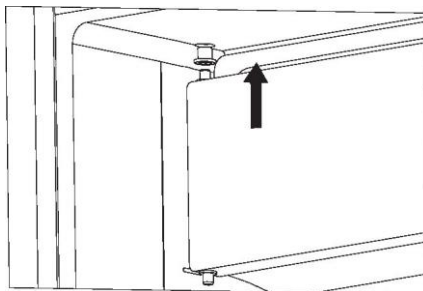

5. Držati vrata komore zamrzivača zatvorenim. Pričvrstiti dugme za instalaciju na donji nosač vrata. Pritisnuti dugme za instalaciju tako da nema prostora između dugmeta i rupe, zatim zategnuti vijak.

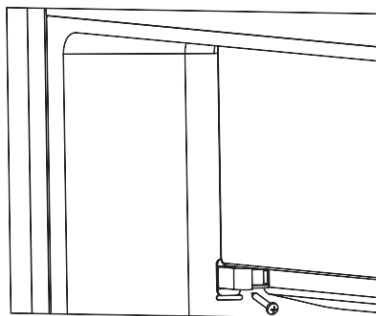


Upozorenje!

1. Prilikom promene strane na koju se vrata otvaraju, uređaj ne sme biti uključen u struju. Prethodno izvaditi utikač iz utičnice.
2. Molimo koristite poklopce za rupe za vijke kako se rupe za vijke ne bi videle u završnom položaju uređaja. Poklopci za rupe za vijke se mogu pronaći u plastičnom pakovanju.


Montaža ručice vrata

Ukoliko je ručica vrata odvojeno dostavljena u plastičnoj kesi sa vašim uređajem, možete je montirati na sledeći način.

1. Ukloniti vijak sa vrata. Držati ili montirati poklopce za vijak na strani koja ima šarku.

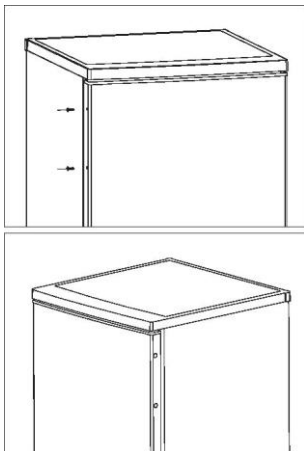

2. Poravnati ručicu za vrata, zatim pričvrstiti vijak koji ste uklonili sa vrata kako bi se ručica fiksirala na vratima.

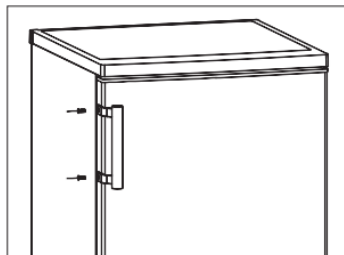

Odlaganje uređaja

Zabranjeno je odlagati ovaj uređaj zajedno sa kućnim otpadom.

Ambalažni materijal

Ambalažni materijal obeležen simbolom za reciklažu se može reciklirati. Ambalažu odlagati u odgovarajući kontejner za otpad kako bi se omogućila njena reciklaža.

Pre odlaganja uređaja

1. Izvući utikač iz utičnice.
2. Iseći strujni kabl i odvojeno ga odložiti.

	Pravilno odlaganje ovog proizvoda
	Ova oznaka ukazuje na to da se ovaj proizvod u EU ne sme odlagati zajedno sa otpadom iz domaćinstva. Kako bi se sprečio mogući štetni uticaj na životnu sredinu ili zdravlje ljudi usled nekontrolisanog odlaganja otpada, reciklirati otpad na odgovoran način kako bi se promovisala održiva ponovna upotreba materijalnih resursa. Za vraćanje vašeg polovnog uređaja, molimo vas da koristite sisteme staro-za-novo ili kontaktirajte maloprodavca od koga ste kupili proizvod. Oni mogu preuzeti ovaj proizvod za reciklažu na ekološki-bezbedan način.

Kako bi se izbegla kontaminacija hrane, molimo pratite sledeće smernice
Otvaranje vrata na duže vreme može izazvati znatno povećanje temperature u komorama uređaja.

Redovno čistiti površine koje dolaze u dodir sa hranom i pristupačne sisteme za pražnjenje vode.

Sveže meso i ribu držati u odgovarajućim posudama u frižideru, tako da ne dođu u dodir ili kako ne bi kapali na druge namirnice.

Odeljci za zamrznutu hranu sa dve zvezdice su podesni za skladištenje prethodno zamrznute hrane, čuvanje ili pravljenje sladoleda i pravljenje ledenih lizalica.

Odeljci sa jedno, dve ili tri zvezdice, nisu podesni za zamrzavanje sveže hrane.

Redosled	TIP komore	Ciljana temperatura čuvanja hrane [°C]	Odgovarajuće namirnice
1	Frižider	+2~+8	Jaja, kuvana hrana, upakovana hrana, voće i povrće, mlečni proizvodi, torte, pića i druge namirnice koje nisu podesne za zamrzavanje.
2	(***)*-Zamrzivač	≤-18	Morska hrana (riba, škampi, školjke), proizvodi od slatkovodnih životinja i proizvodi od mesa (preporučeno vreme je 3 meseca – hranljive vrednosti i ukus opadaju vremenom), podesno za zamrznutu svežu hranu.
3	***-Zamrzivač	≤-18	Morska hrana (riba, škampi, školjke), proizvodi od slatkovodnih životinja i proizvodi od mesa (preporučeno vreme je 3 meseca – hranljive vrednosti i ukus opadaju vremenom). Nije podesno za zamrzavanje sveže hrane.
4	**--Zamrzivač	≤-12	Morska hrana (riba, škampi, školjke), proizvodi od slatkovodnih životinja i proizvodi od mesa (preporučeno vreme je 2 meseca – hranljive vrednosti i ukus opadaju vremenom). Nije podesno za zamrzavanje sveže hrane.
5	*-Zamrzivač	≤-6	Morska hrana (riba, škampi, školjke), proizvodi od slatkovodnih životinja i proizvodi od mesa (preporučeno vreme je 1 mesec – hranljive vrednosti i ukus opadaju vremenom). Nije podesno za zamrzavanje sveže hrane.
6	0-zvezdica	-6~0	Sveža svinjetina, junetina, riba, piletina, određene upakovane prehrambene namirnice, itd. (Preporučeno da se jedne istog dana, uz preporuku da ne prođe više od 3 dana). Delimično upakovane/umotane prehrambene namirnice (namirnice koje se ne smeju zamrzavati)
7	Hlađenje	-2~+3	Sveža/zamrznuta svinjetina, junetina, piletina, proizvodi od slatkovodnih životinja, itd. (7 dana na temperaturi ispod 0°C a iznad 0°C se preporučuje za konzumaciju istog dana, poželjno ne duže od 2 dana). Plodovi mora (na temperaturi ispod 0°C - 15 dana, ne preporučuje se čuvanje na temperaturi iznad 0°C)

8	Sveža hrana	0~+4	Sveža svinjetina, junetina, riba, spremljena hrana, itd. (Preporučeno da se jedne istog dana, uz preporuku da ne prođe više od 3 dana).
9	Vino	+5~+20	crveno vino, belo vino, penušavo vino, itd.

Napomena: molimo vas da različite namirnice čuvate u skladu sa odeljcima, odnosno ciljnim temperaturama čuvanja u vašem uređaju.

- Ukoliko je rashladni uređaj prazan duže vreme, isključiti ga, otopiti, očistiti, osušiti i ostaviti vrata otvorenim kako bi se sprečilo formiranje buđi u uređaju.

Čišćenje uređaja za točenje vode (važi za proizvode sa uređajem za točenje vode):

Očistiti rezervoare za vodu ukoliko nisu korišćeni 48h; isprati sistem za vodu koji je povezan sa dovodom vode ukoliko vode nije točena 5 dana.

UPOZORENJE! Hrana se mora spakovati u kesice pre stavljanja u frižider a tečnosti se moraju staviti u flaše ili posude sa poklopcem kako bi se izbegli problemi jer konstrukcija proizvoda nije laka za čišćenje.

The Hisense logo is displayed in a bold, white, sans-serif font. The background of the entire page features a dark grey gradient on the left, transitioning into several broad, sweeping, curved bands of lighter grey and white that flow from the bottom left towards the top right, creating a sense of dynamic movement.

Hisense

life reimagined

USER'S OPERATION MANUAL

Before operating this unit, please read this manual thoroughly, and retain for future reference

English

Contents

Safety and warning information.....	2	Cleaning and care.....	13
Description of the appliance	8	What to do if... ..	14
Control panel.....	8	Reversing the door.....	15
First use an installation.....	9	Installing the door handle.....	17
Daily use.....	11	Disposal of the appliance.....	18
Helpful hints and tips.....	12		



Safety and warning information

For your safety and correct usage, before installing and first using the appliance, read this user manual carefully, including its hints and warnings. To avoid unnecessary mistakes and accidents, it is important to make sure that all people using the appliance are thoroughly familiar with its operation and safety features. Save these instructions and be sure that they remain with the appliance if it is moved or sold, so that anyone using it throughout its life, will be properly informed on its usage and safety notices.

For the safety of life and property, keep the precautions of these user's instructions as the manufacturer is not responsible for damages caused by omission.

Safety for children and others who are vulnerable people

- According to EN standard

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

- According to IEC standard

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

- Keep all packaging away from children as there is a risk of suffocation.
- If you are discarding the appliance, pull the plug out of the socket, cut the connection cable (as close to the appliance as you can) and remove the door to prevent children playing from suffering an electric shock or from closing themselves inside it.
- If this appliance, featuring a magnetic door seals, is to replace an older appliance having a spring lock (latch) on the door or lid, be sure to make the spring lock unusable before you discard the old appliance. This will prevent it from becoming a death trap for a child.

General safety



- **WARNING** — This appliance is intended to be used in household and similar applications such as
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses and by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments;
 - catering and similar non-retail applications.
- **WARNING** — Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- **WARNING** — If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- **WARNING** — Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- **WARNING** — Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- **WARNING** — Do not damage the refrigerant circuit.
- **WARNING** — Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.

-
- **WARNING** — The refrigerant and insulation blowing gas are flammable. When disposing of the appliance, do so only at an authorized waste disposal centre. Do not expose to flame.
 - **WARNING** —When positioning the appliance, ensure the supply cord is not trapped or damaged.
 - **WARNING** —Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.

Replacing the illuminating lamps

- **WARNING**—The illuminating lamps must not be replaced by the user! If the illuminating lamps is damaged, contact the customer helpline for assistance.

This warning is only for refrigerators that contain illuminating lamps.

Refrigerant

The refrigerant isobutene (R600a) is contained within the refrigerant circuit of the appliance, a natural gas with a high level of environmental compatibility, which is nevertheless flammable. During transportation and installation of the appliance, ensure that none of the components of the refrigerant circuit becomes damaged.

The refrigerant (R600a) is flammable.

- **WARNING** — Refrigerators contain refrigerant and gases in the insulation. Refrigerant and gases must be disposed of professionally as they may cause eye injuries or ignition. Ensure that tubing of the refrigerant circuit is not damage prior to proper disposal.



WARNING : Risk of fire / flammable materials

If the refrigerant circuit should be damaged:

- Avoid opening flames and sources of ignition.
- Thoroughly ventilate the room in which the appliance is situated.

It is dangerous to alter the specifications or modify this product in any way.

Any damage to the cord may cause a short circuit, fire, and/or electric shock.



Electrical safety

1. The power cord must not be lengthened.
2. Make sure that the power plug is not crushed or damaged. A crushed or damaged power plug may overheat and cause a fire.
3. Make sure that you can access the main plug of the appliance.
4. Do not pull the main cable.
5. If the power plug socket is loose, do not insert the power plug. There is a risk of electric shock or fire.
6. You must not operate the appliance without the interior lighting lamp cover.
7. The fridge is only applied with power supply of single phase alternating current of 220~240V/50Hz. If fluctuation of voltage in the district of user is so large that the voltage exceeds the above scope, for safety sake, be sure to apply A.C. Automatic voltage regulator of more than 350W to the fridge. The fridge must employ a special power socket instead of common one with other electric appliances. Its plug must match the socket with ground wire.

Daily use

- Do not store flammable gass or liquids in the appliance, There is a risk of an explosion.
- Do not operate any electrical appliances in the appliance (e.g. electric ice cream makers, mixers etc.).
- When unplugging always pull the plug from the mains socket, do not pull on the cable.
- Do not place hot items near the plastic components of this appliance.

-
- Do not place food products directly against the air outlet on the rear wall.
 - Store pre-packed frozen food in accordance with the frozen food manufacture's instructions.
 - The appliances manufactures storage recommendations should be strictly adhered to. Refer to relevant instructions for storage.
 - Do not place carbonated or fizzy drinks in the freeze compartment as it creates pressure on the container, which may cause it to explode, resulting in damage to the appliance.
 - Frozen food can cause frost burns if consumed straight from the freezer compartment.
 - Do not place the appliance in direct sunlight.
 - Keep burning candles, lamps and other items with naked flames away from the appliance so that do not set the appliance on fire.
 - The appliance is intended for keeping food stuff and/or beverages in normal household as explained in this instruction booklet The appliance is heavy. Care should be taken when moving it.
 - Do not remove nor touch items from the freezer compartment if your hands are damp/wet, as this could cause skin abrasions or frost/freezer burns.
 - Never use the base, drawers, doors etc. to stand on or as supports.
 - Frozen food must not be refrozen once it has been thawed out.
 - Do not consume ice popsicles or ice cubes straight from the freezer as this can cause freezer burn to the mouth and lips.
 - To avoid items falling and causing injury or damage to the appliance, do not overload the door racks or put too much food in the crisper drawers.

caution!

Care and cleaning

-
- Before maintenance, switch off the appliance and disconnect the mains plug from the mains socket.
 - Do not clean the appliance with metal objects, steam cleaner, ethereal oils, organic solvents or abrasive cleansers.
 - Do not use sharp objects to remove frost from the appliance. Use a plastic scraper.

Installation Important!

- For electrical connection carefully, follow the instructions given in this manual.
Unpack the appliance and check if there are damages on it.
- Do not connect the appliance if it is damaged. Report possible damages immediately to the place you bought it. In this case retain packing.
- It is advisable to wait at least four hours before connecting the appliance to allow the oil to flow back in the compressor.
- Adequate air circulation should be around the appliance, lacking this leads to overheating. To achieve sufficient ventilation, follow the instructions relevant to installation.
- Wherever possible the back of the product should not be too close to a wall to avoid touching or catching warm parts (compressor, condenser) to prevent the risk of a fire, follow the instructions relevant to installation.
- The appliance must not be locate close to radiators or cookers.
- Make sure that the mains plug is accessible after the installation of the appliance.

Service


- Any electrical work required to do the servicing of the appliance should be carried out by qualified electrician or competent person.
- This product must be serviced by an authorized Service Center, and only genuine spare parts must be used.
 - 1)If the appliance is Frost Free.
 - 2)If the appliance contains freezer compartment.

Note: Children aged from 3 to 8 years are allowed to load and unload refrigerating appliances.(This clause applies only to the EU region.)

Description of the appliance

View of the appliance

1. Freezer chamber
2. Ice tray(in Freezer chamber)
3. Egg tray
4. Storage shelf
5. Crisper cover
6. Crisper
7. Lower door rack
8. Adjustable feet
9. Bulb & temperature regulator
10. Upper door rack
11. Door
12. Door handle(some models have)

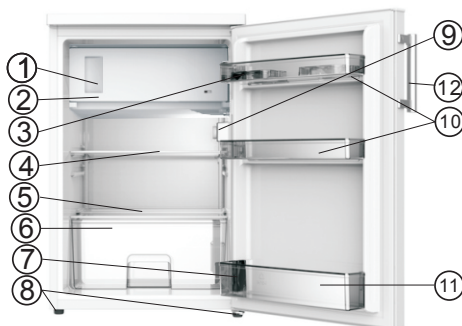

Note: Due to continual modification of our products, your refrigerator may be slightly different from this instruction Manual, but its functions and usage methods remain the same.

Note: To get the best energy efficiency of this product, please place all shelves, drawers on their original position as the illustration above.

Control panel

Starting up and temperature regulation

Insert the plug of the connection lead into the plug socket with a protective grounding contact. When the refrigerator compartment door is opened, the internal lighting is switched on.

The temperature selector knob is located on the left side of the refrigerator compartment.

Setting "0" means off.

Turning in a clockwise direction the refrigeration unit turns on, it will then operate automatically.

Setting "1" means

Highest temperature, warmest setting.

Setting "7" (end-stop) means

Lowest temperature, coldest setting.

Important! For optimum food preservation, we advise you select a

setting of 3 or 4; if you want the temperature higher or lower, please turn the knob to a warmer or colder setting accordingly. When you turn the knob to a colder setting, this can lead to the more energy efficiency.

Otherwise, it would result the consumption of energy.

Important! High ambient temperatures (e.g. on hot summer days) and a cold setting (position 6 to 7) may cause the compressor to run continuously or even non-stop!

Reason: When the ambient temperature is high, the compressor must run continuously to maintain the low temperature in the appliance.

NOTE: High temperature setting will accelerate food waste.


Changing the light bulb



Warning!

● Before changing the light bulb, switch off the appliance and unplug it, or pull the fuse or the circuit breaker.

● If the light bulb can't work, please contact your specialist dealer or your local Customer Service Center to change it.

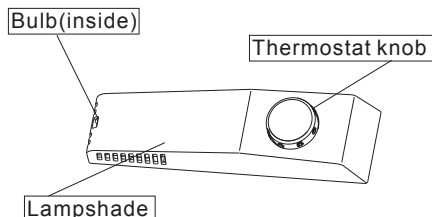

First use an installation

Cleaning before use

- Before using the appliance for the first time, wash the interior and all internal accessories with lukewarm water and neutral soap in order to remove the typical smell of a brand new product, then dry thoroughly.

Installation Positioning




Warning! Before installing, read the instruction carefully for your safety and the correct operation of appliance.

- Position the appliance away from sources of heat such as stoves, radiators, direct sunlight, etc.
- Maximum performance and safety are guaranteed by maintaining the correct indoor temperature for the class of unit concerned, as specified on the rating plate.
- This appliance performs well from N to ST. The appliance may not work properly if it is left for a longer period at a temperature above or below the indicated range.

Climate class	Ambient temperature
SN	+10°C to +32°C
N	+16°C to +32°C
ST	+16°C to +38°C
T	+16°C to +43°C

Important! It is necessary to have good ventilation around the fridge to allow for the dissipation of heat, high efficiency and low sufficiently cleared space should be available around the fridge. It is advisable for there to be 50-70mm separating the back of the fridge to the wall at least 100mm of space on its two sides, a height of over 100mm from its top and a clear space in front to allow the doors to open 160°.

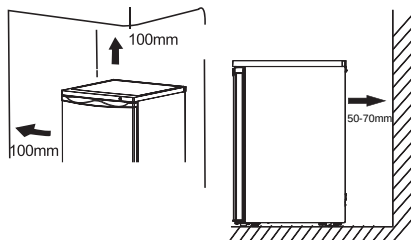

- Appliances must not be exposed to rain. Sufficient air must be allowed to circulate in the low rear section of the appliance, as poor air circulation can affect performance. Built-in appliances should be positioned away from heat sources such as heaters and direct sunlight.


Installing the rubber supporting

- screw provided in a plastic bag with your appliance, you can install these accessories according to the following procedure.

Note:


There is no need to install these accessories under normal usage. Only under the extreme circumstances, cabinet empty while load on door with total mass of 15 kg and opening the door about 90 degree, this refrigerator may take risk of tipping. Then rubber supporting pad should be fastened to the lower base cover to steady this appliance.

1. Tilt appliance to find screw hole on the left of lower base cover.

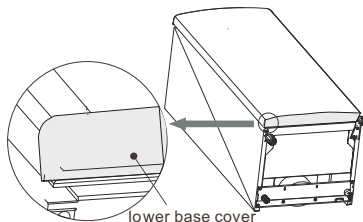


First use and installation

2. Put screw into the hole of rubber supporting pad.

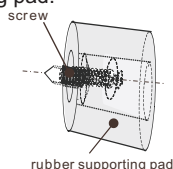

3. Make screw in alignment with the hole on lower base cover. Fasten rubber supporting pad to the base cover firmly by a cross screw driver (self-provided).

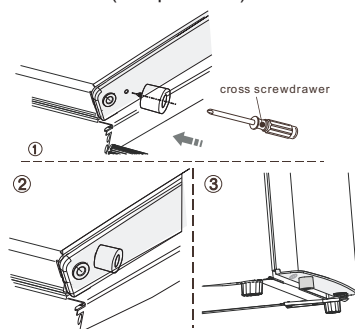

Leveling

- The appliance should be level in order to eliminate vibration. To make the appliance level, it should be upright and both adjusters should be in stable contact with the floor. You can also adjust the level by unscrewing the appropriate level adjustment in the front (use your fingers or a suitable spanner).

Electrical connection

Caution! Any electrical work required to install this appliance should be carried out by qualified or authorized personnel.

Warning! This appliance must be grounded. The manufacturer declines any liability should these safety measures not be observed.

- This refrigerating appliance is not intended to be used as a built-in appliance.

Daily use


Accessories ¹⁾

Movable shelves/trays

- Various glass, plastic storage shelves or wire trays are included with your appliance different models have different combinations and different models have different features.
- The walls of the refrigerator are equipped with a series of runner so that the shelves can be positioned as desired.


Remove door rack

Hold the left side of the door rack, inward-press the other side and lift this side until it separated from the liner. Then you can take out the door rack from the liner.

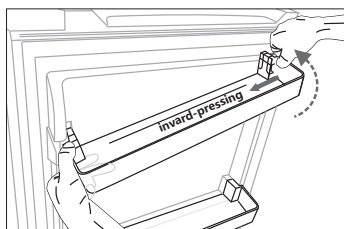

Installation door rack

First, install the left of the door rack. Second, inward-press the other side and downward-press this side until installation it.

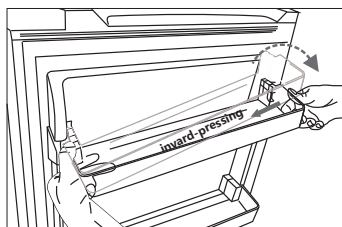

Crisper

- For storing fruit and vegetables.

Ice tray

- For making ice and storing ice-cubes.

Refrigerator compartment ²⁾

- For storing the food that does not need to be frozen and different sections suitable for different kinds of food.

Freezer food compartment ²⁾

- For freezing fresh food and storing frozen and deep-frozen food for a long time.

Thawing food ²⁾

- In the refrigerator compartment.
At room temperature.
 - In a microwave oven.
 - In a conventional or convection oven.
- Food once thawed should be re-frozen with the exception of special cases.

1) If the appliance contains related accessories and functions.

2) If the appliance contains a freezer compartment.

Helpful hints and tips

Noises during operation

Clicks - Whenever the compressor switches on or off, a click can be heard.

Humming - As soon as the compressor is in operation, you can hear it humming.

Bubbling - When refrigerant flows into thin tubes, you can hear bubbling or splashing noises.

Splashing - Even after the compressor has been switched off, this noise can be heard for a short time.

Energy saving tips

- Do not install the appliance near stoves, radiators or other sources of warmth.
- Keep the time the appliance is open to a minimum.
- Do not set the temperature colder than necessary.
- Make sure the side plates and back plate of the appliance are at some distance from the wall, and follow the instructions relevant to installation.
- If the diagram shows the correct combination for the drawers, crisper and shelves, do not adjust the combination as it would produce an effect on energy consumption.

Hints for fresh food refrigeration

- Do not store warm foods or evaporating liquids in the appliance.
- Do cover or wrap the food, particularly if it has strong flavor or odor.
- Position food so that air can circulate freely around it.

Hints for refrigeration

- Meat (all types): wrap in polyethylene (plastic) bags and place on the glass shelf above in this way only on or two days at the most.
- Cooked foods, cold dishes, etc....: these should be covered and may be placed on any shelf.

- Fruit and vegetables: these should be thoroughly cleaned and placed in the special drawer provided.
- Butter and cheese: these should be placed in aluminum foil or polyethylene (plastic) bags while removing as much air as possible.
- Milk bottles: these should have a cap and should be stored in the bottle rack on the door.

Hints for freezing

- When first starting-up or after a period out of use. Before putting the food in the compartment, let the appliance run at least 2 hours on the higher settings.
- Prepare food in small portions to enable it to rapidly and completely frozen and to make it possible to subsequently thaw only the quantity required.
- 'Wrap up the food in aluminum foil or polyethylene (plastic) and make sure that the packages are airtight.
- Do not allow fresh, unfrozen food to touch food that is already frozen, thus avoiding a rise in the temperature of latter.
- Iced products, if consumed immediately after removal from the freezer compartment can possibly cause skin to become freezer burnt.
- It is recommended to label and date each frozen package in order to keep track of the storage time.

Hints for the storage of frozen food

- Make sure that commercially frozen food was stored by the retailer.
- Once defrosted, foods deteriorate rapidly and can not be re-frozen.
- Do not exceed the storage period indicated by the food manufacturer.

Note: If the appliance contains related accessories and functions.

Cleaning and care

Cleaning and care

For hygienic reasons, the appliance interior, including interior accessories, should be cleaned regularly.

The appliance should be cleaned and maintained at least every two months.



Warning! Danger of electrical shock!

- The appliance should not be connected to the main power supply during cleaning. Before cleaning, switch the appliance off and remove the plug from the main power supply, switch off, or shut off the circuit breaker of fuse.

Notice!

- Remove the food from the appliance before cleaning. Store them in a cool place and keep well covered.
- Never clean the appliance with a steam cleaner. Moisture could accumulate in electrical components.
- Hot vapors can lead to the damage of plastic parts.
- Ethereal oils and organic solvents can attack plastic parts, e.g. lemon juice or the juice from an orange peel, butyric acid, or cleansers that contain acetic acid.
- Do not use any abrasive cleansers.
- Clean the appliance and the interior accessories with a cloth and lukewarm water. Commercially available dish washing detergents may also be used.
- After cleaning, wipe with fresh water and a clean dish cloth.
- Accumulation of dust at the condenser increases energy consumption; clean the condenser at the back of the appliance once a year with a soft brush or a vacuum cleaner. (Only for the outside-condenser product)
- Check the water drain hole on the rear wall of the refrigerator compartment.
- Clear a blocked drain hole with the aid of something like soft green peg, an be careful not to create any damage to the cabinet by sharp objects.
- After everything is dry, the appliance back into service.

Defrosting

Defrosting in the fresh food storage compartment

- Water from the defrosting option will

automatically be drained into a drip tray through a drain pipe at the back of the appliance.

Defrosting in the frozen food storage compartment

- Defrosting in the freezer chamber is operated manually. Before defrosting, take the foot out.
- Take the ice tray and drawers out or put them into the fresh food compartment temporarily.
- Set the knob of the temperature regulator to the "0" (where the compressor will stop working) and leave the door of the refrigerator open until ice and frost dissolve thoroughly and accumulate at the bottom of the freezer chamber. Wipe out the water with soft cloth.
- In order to speed up the process of defrosting, you may put a bowl of warm water (about 50°C) into the freezer chamber and scrape away the ice and frost with a defrosting spatula. After doing so, be sure to set the knob of the temperature regulator to the original position.
- It is not advisable to heat the freezer chamber directly with hot water or hair dryer while defrosting to avoid deformation of the inner case.
- It is also not advisable to scrape off ice and frost or separate foods from the containers which have been congealed together with the food with sharp tools or wooden bars, so as not to damage the inner casing or the surface of the evaporator.

Warning! To switch off the appliance before defrosting, turn the temperature regulator to the "0" position.

Notice! The appliance should be defrosted at least once a month. During its usage, if the door has been used in extreme humidity, we advise the user to defrost every two weeks.

Taking the appliance out of service

- Empty the appliance
- Pull out the power plug
- Clean thoroughly (see section: Cleaning and Care).
- Leave the door open to prevent odours

What to do if...



Warning! Before troubleshooting, disconnect the power supply. Only a qualified electrician or other

personnel must carry out the troubleshooting that is not in the manual.

Important!

Repairs to the appliance may only be

performed by competent service engineers. Improper repairs can give rise to significant hazards for the user. If your appliance needs repairing, please contact your specialist dealer or your local Customer Service Center.

Problem	possible cause	Solution
Appliance dose not work.	Appliance is not switched on.	Switch on the appliance.
	Main plug is not plugged in or is loose.	Plug the appliance into the electrical socket.
	Fuse has blown or is defective.	Check fuse, replace if necessary.
	Outlet is defective.	Defective parts need to be repaired by an electrician.
Appliance cools too much.	Temperature is set too cold.	Turn the temperature regulator to a warmer setting temporarily.
The food is too warm.	Temperature is not properly adjusted.	Please refer to the "Starting up and temperature regulation" section.
	Door was open for an extented period.	Open the door only as long as necessary.
	A large quantity of warm food was placed in the appliance within the last 24 hours.	Turn the temperature regulator to a warmer setting temporarily.
	The appliance is near a heat source.	Please refer to the "Installation positioning" section.
Interior lighting dose not work.	Light bulb is defective.	Please look in the "Changing the Light Bulb" section.
Heavy build-up of frost, possibly also on the door seal.	Door seal is not air-tight (possibly after reversing the door) .	Carefully warm the leaking sections of the door seal with a hair dryer (on a cool setting). At the same time, shape the warmed door seal by hand so that it sits correctly.
Unusual noises.	Appliance is not level.	Readjust the feet.
	The appliance is touching the wall or other objects.	Move the appliance slightly.
	A component, e.g. a pipe, on the rear of the appliance is touching another part of the appliance or the wall.	If necessary, carefully bend the component out of the way.
The compressor dose not start immediately after changing the temperature setting.	This is normal, no error has occurred.	The compressor starts after a period of time.
Water on the floor or storage shelves.	Water drain hole is blocked.	Refer the "Cleaning and Care" section.

Reversing the door

The side in which the door opens can be changed from the right side (as supplied) to the left side, if the installation site allows for it. Tools you will need:

1. 8mm socket driver



 
2. 10mm socket driver



3. Cross- shaped screwdriver




4. Putty knife or thin-blade screwdriver




Before you begin, place the fridge on it's back in order to gain access to the base, you should rest it on soft foam packaging or similar material to avoid damaging the cooling pipes at the rear of the fridge.

Reverse the door

1. stand the fridge, remove the two screws on the back of the top cover, then lift the top cover and place it on a padded surface to prevent scratching.

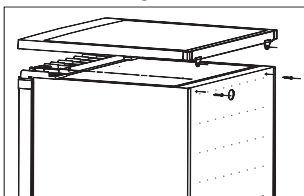


2. Remove the four screws as follow diagram. Lift the upper hinge core ,then put it in a safe place.

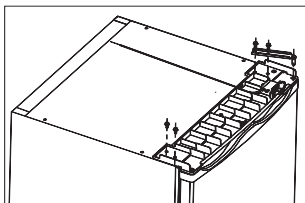


3. Lift the door and place it on a padded surface to prevent scratching. Remove both adjustable feet and remove the bottom hinge bracket by unscrewing the bolts. Then transfer them to another side.

Note: 1. You need move hinge axis from hole ① to ② before transfer.


2. You need install the rubber supporting on the side which haven't hinge.

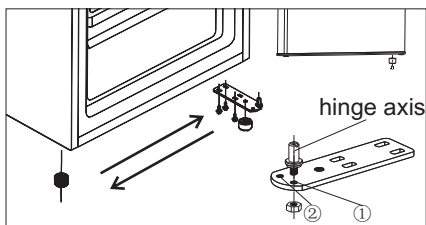

4. Set the door into its new place making sure the pin enters the bushing at the lower frame section. Replace the lid by fitting the upper hinge core into the upper door's hole, securing it with the 2 screws. Replace another 2 screws to another side.

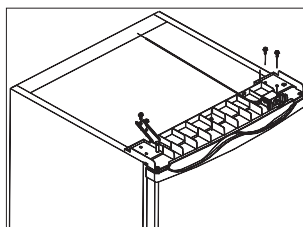


5. Put the top cover in the freezer. Tighten the 2 screws on the back of top cover.

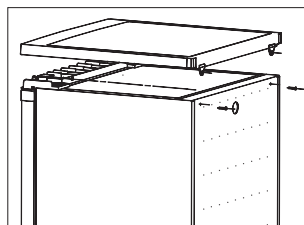


Changing over the freezer compartment door



1. Keep the freezer compartment door closed. Using a screwdriver, remove the mount screw for the installation button, and take the installation button down.

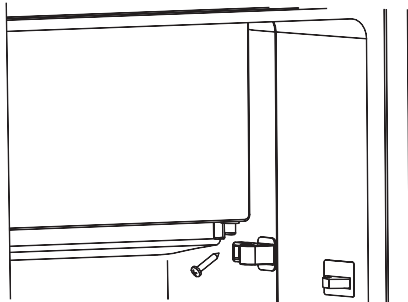


2. Open the freezer compartment door a little way. Pull down the freezer compartment door and the cap which covering on the up door bearing(1).

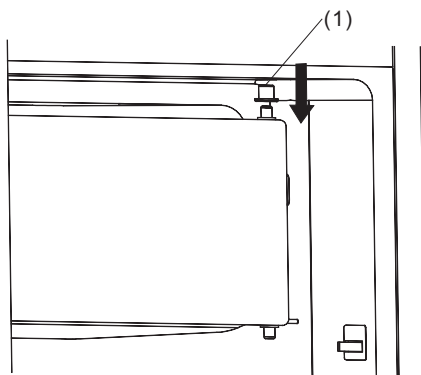


3. Using a screwdriver, take down the installation buckle, and then fix it in the opposite side.

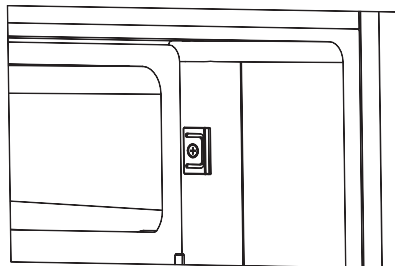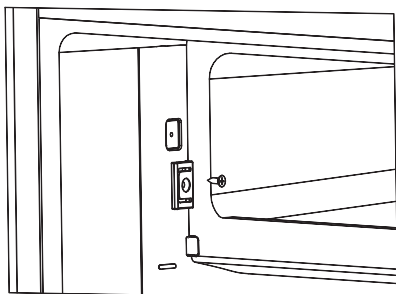

4. Turn the freezer compartment door through 180°, cover the cap on the up door bearing, then fit the door into the up door axle hole.

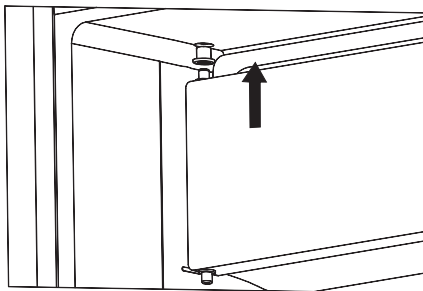

5. Keep the freezer compartment door closed. Fix the installation button to the lower door bearing, Press the installation button to make it have no gap with the cavity, then fix the screw.

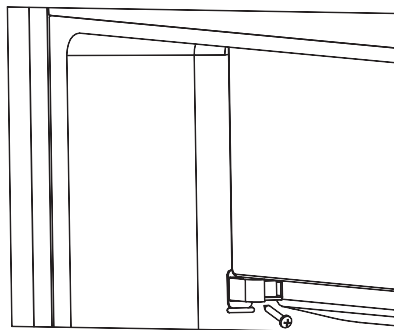


Warning!

1. When changing the side at which the door opens, the appliance must not be connected to the mains. Remove plug from the mains beforehand.
2. Please use the screw hole covers to decorate the screw holes in the original installation position. The screw hole covers can be find in the plastic packet.


Installing the door handle

If there is door handle separately provided in a plastic bag with your appliance, you can install it as follows .

1. Remove the screw on the door.Keep or install the screw covers on the side which have hinge.

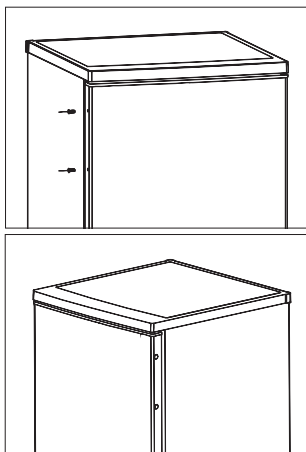

2. Match the handle hole to the door , then fix the screw which you removed from the door to make the handle fixed firmly on the door.

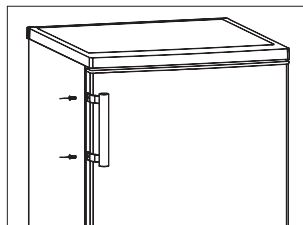

Disposal of the appliance

It is prohibited to dispose of this appliance in domestic household waste.

Packaging materials

Packaging materials with the recycle symbol are recyclable. Dispose of the packaging in a suitable waste collection container to recycle it.

Before disposal of the appliance.

1. disconnect the main plug from the main socket.
2. Cut off the main cable and discard it.

	Correct Disposal of this product
	This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

To avoid contamination of food, please respect the following instructions

- Opening the door for long periods can cause a significant increase of the temperature in the compartments of the appliance.
- Clean regularly surfaces that can come in contact with food and accessible drainage systems.
- Store raw meat and fish in suitable containers in the refrigerator, so that it is not in contact with or drip onto other food.
- Two-star frozen-food compartments are suitable for storing pre-frozen food, storing or making icecream and making ice cubes.
- One-, two- and three-star compartments are not suitable for the freezing of fresh food.

Order	Compartments TYPE	Target storage temp.[°C]	Appropriate food
1	Fridge	+2~ +8	Eggs, cooked food, packaged food, fruits and vegetables, dairy products, cakes, Drinks and other foods which are not suitable for freezing.
2	(***)*-Freezer	≤ -18	Seafood (fish, shrimp, shellfish), freshwater aquatic products and meat products (recommended time is 3 months – nutrition values and taste decrease with time), suitable for frozen fresh food.
3	***-Freezer	≤ -18	Seafood (fish, shrimp, shellfish), freshwater aquatic products and meat products (recommended time is 3 months – nutrition values and taste decrease with time). Not suitable for freezing fresh food.
4	** -Freezer	≤ -12	Seafood (fish, shrimp, shellfish), freshwater aquatic products and meat products (recommended time is 2 months – nutrition values and taste decrease with time). Not suitable for freezing fresh food.
5	*-Freezer	≤ -6	Seafood (fish, shrimp, shellfish), freshwater aquatic products and meat products (recommended time is 1 month – nutrition values and taste decrease with time). Not suitable for freezing fresh food.
6	0-star	-6~0	Fresh pork, beef, fish, chicken, some packaged processed foods, etc. (Recommended to eat within the same day, preferably not later than 3 days) . Partially packed/wrapped up encapsulated processed foods (non-freezable foods)
7	Chill	-2~+3	Fresh/frozen pork, beef, chicken, freshwater aquatic products, etc.(7 days below 0 °C and above 0 °C is recommended for consumption within that day, preferably no more than 2 days) . Seafood (less than 0°C for 15 days, it is not recommended to store above 0 °C)

8	Fresh Food	0 ~ +4	Fresh pork, beef, fish, chicken, cooked food, etc. (Recommended to eat within the same day, preferably no more than 3 days)
9	Wine	+5 ~ +20	red wine, white wine, sparkling wine etc.

Note: please store different foods according to the compartments or target storage temperature of your purchased products.

- If the refrigerating appliance is left empty for long periods, switch off, defrost, clean, dry, and leave the door open to prevent mould developing within the appliance.

Water dispenser cleaning (special for water dispenser products):

- Clean water tanks if they have not been used for 48 h; flush the water system connected to a water supply if water has not been drawn for 5 days.

WARNING! Food needs to be packed in bags before putting into the refrigerator, and liquids need to be packed in bottles or capped containers to avoid the problem that the product design structure is not easy to clean.

